




20 min

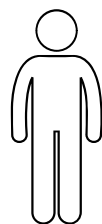


x1




x1



(1) x1



(2) x4



(3) x1



(4) x1



(5) x4 (M6x25)



(6) x8



(7) x1



(8) x1



(9) x4



(10) x4



(11) x4




(12) x4 (M6x16)



(13) x8 (M6x30)



(14) x8

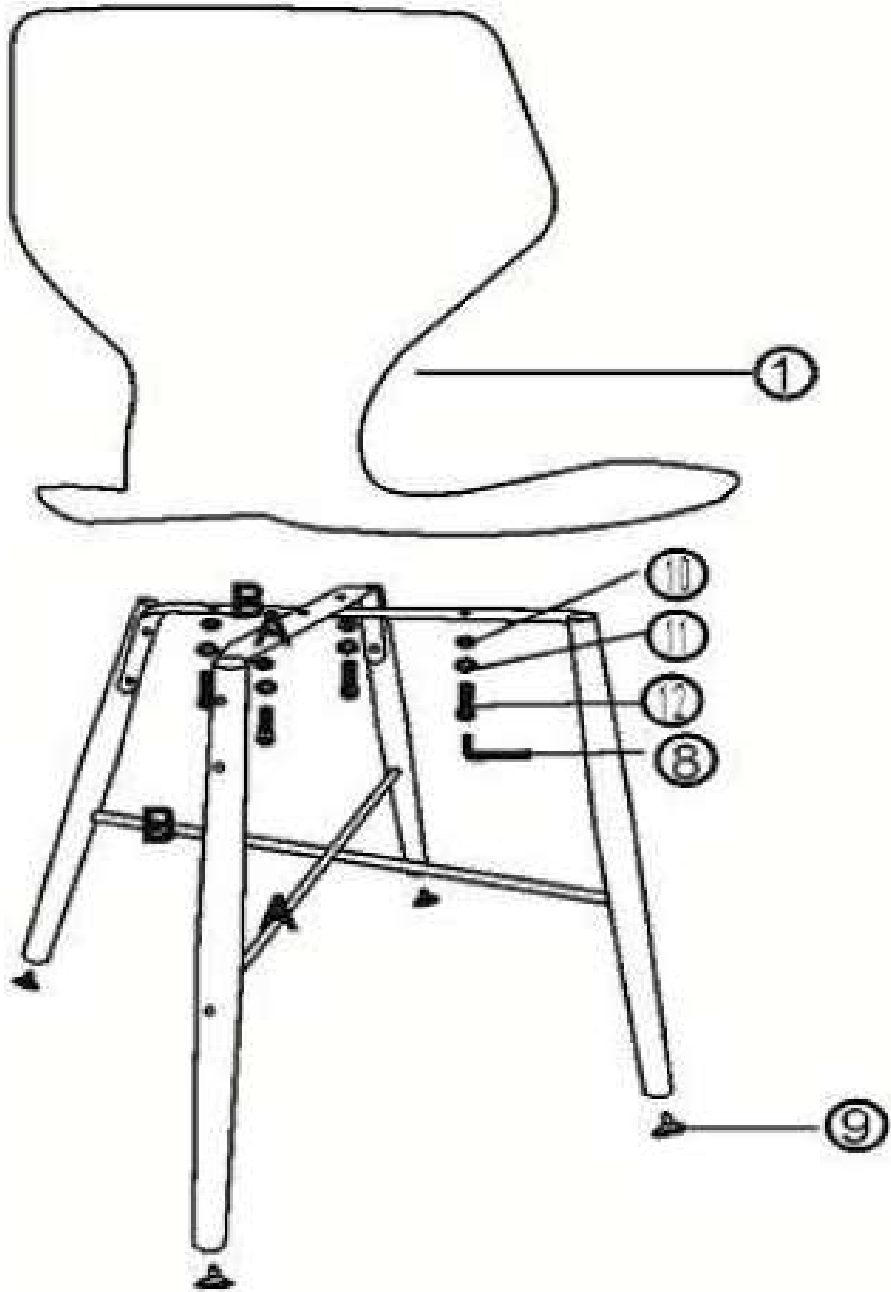




1

Nota: Al principio, ajustar todos los tornillos sólo al 80%


Note: Firstly, assemble all the screws by 80%

Remarque: Dans un premier temps, visser provisoirement tous les vis à 80%

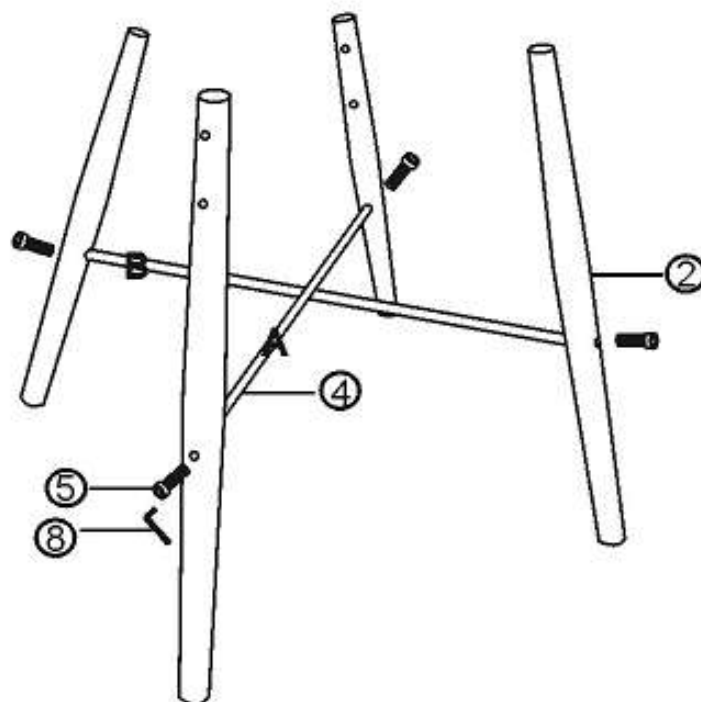




2

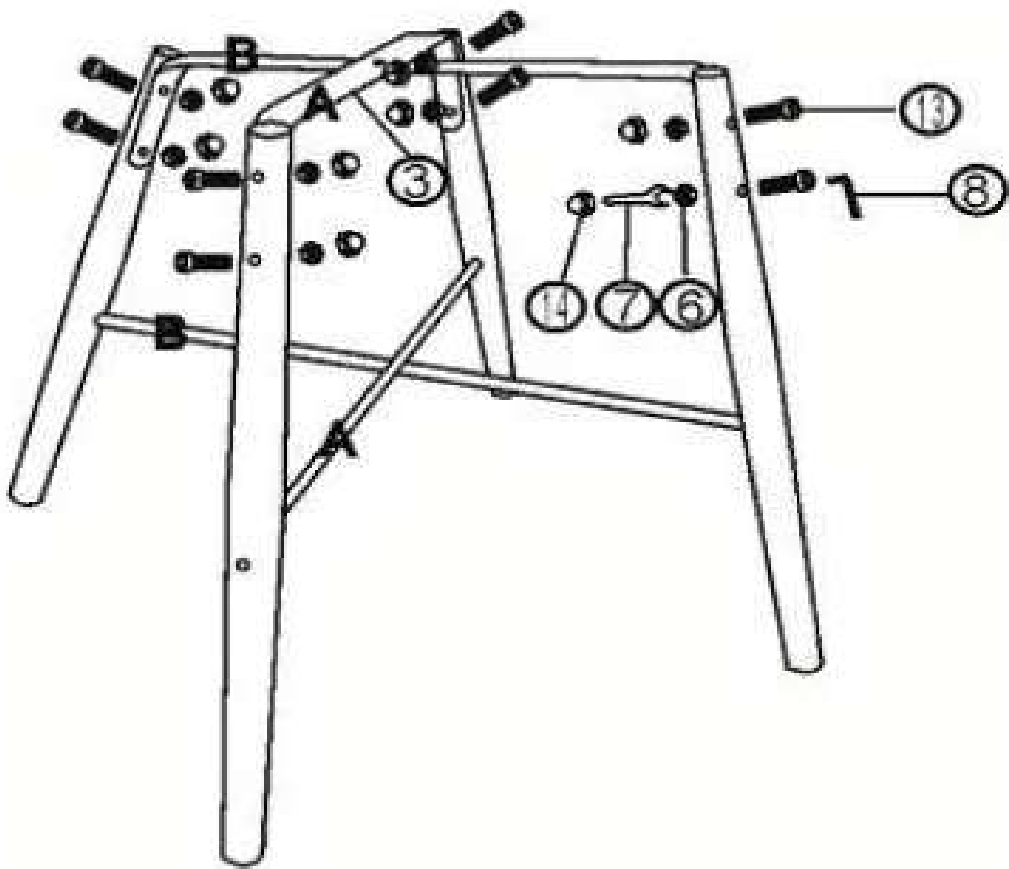

3

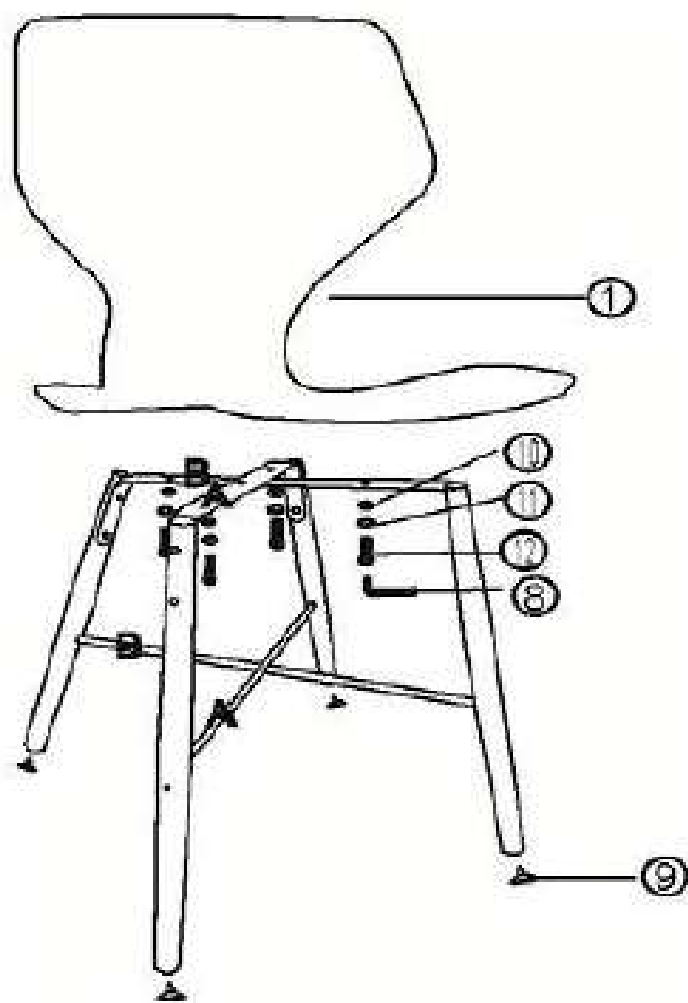



4





THAT'S ALL FOLKS!

JULIÀ GRUP Furniture Solutions S.L.

B-17616277

Pol. Ind. Bosc d'en Cuca

C / Tallers, 14

17410 Sils SPAIN

contact@kavehome.com